

DERWENT PUBLICATIONS LTD.

61751V/35

B03

CIBA-GEIGY AG


CHEM 19.02.73

DT 2405-171

20.10.73-CH-014936 (+002381) (22.08.74) C07d-31/32

Oxo alkyl pyridine compds. - having fibrinolytic, analgesic and anti-inflammatory activity are prep'd. e.g. by oxida of corresp. alcohol

Compds. of formula (I) and their salts are new:





(where R = opt. subst'd, cycloaliphatic gp.), Ph = ortho- or para-phenylene gp.; A = lower alkylene or a direct bond, X = oxo grp. opt. functionally modified e.g. to NOH, Py = pyridyl).

USES




Compds. (I) are useful intermediates and have fibrinolytic, analgesic and anti-inflammatory activities. Test results are reported.

PREPARATION

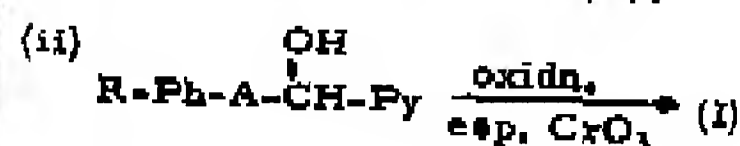

B7-D4, B12-(D1,D7), B12-H2.

3 20

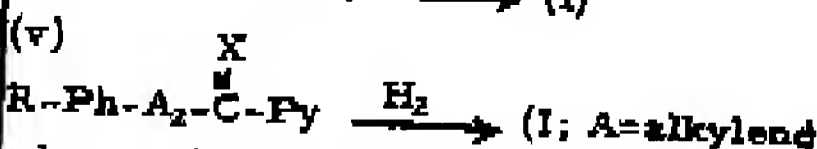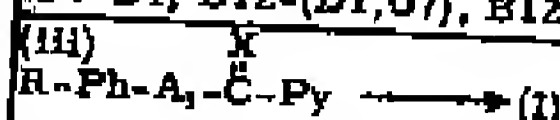

wherein (i) one of the gps. Y and Z is carboxyl, or a functional deriv. thereof and the other is a metal atom; (ii) A₁ = A subst'd. by a cleavable gp. Y; esp. an α-CO₂H gp.; (iii) Y₂ is a functionally modified carboxyl gp.; (iv) A₂ = lower alkenylene

DETAILS

Y may be an esterified carboxyl, anhydride or a cyano gp.; Z = Na, K, pref. Li or Zn-Hal, pref. Cd-Hal or Mg-Hal. Y₂ is suitably an acid chloride gp. and the reaction is carried out in the conventional way using a Lewis acid as catalyst.

61751V Contd

61751V Contd

SPECIFICALLY CLAIMED

Py	-ACO	Ph
position of substituent		position of substituents
2-	-CO or -CH(CH ₃)CO	4-R ¹ or 3-Cl-4-R ²
3-	-CO	4-R ¹
2-	-CO or -CH(CH ₃)CO (or oxime)	4-R ¹⁰
4-	-CH(CH ₃)CO	4-R ¹⁰
2-, 6-Me	-CH(CH ₃)CO	4-R ¹⁰

(R⁰ = cyclohexyl; R¹⁰ = cyclohexen-1-yl).

EXAMPLE

A 1.5N soln. (175 ml) of butyllithium in ether was stirred at -60° under an atm. of N₂ and 2-bromopyridine (40 g) in anhydrous ether (50 ml) was slowly added dropwise. After 15 mins. p-(1-cyclohexenyl)-benzoic acid (15 g) in anhydrous ether (250 ml) was added. The reaction mixt. was then allowed to warm to room temp. before being stirred for 2 hrs. It was then poured onto a mixt. of ice and NH₄Cl and partitioned between water and ether. The ether phase was sopped, washed with water, 0.1N NaOH soln. and water, dried over Na₂SO₄ and evaporated under reduced pressure. The residue was distilled under reduced pressure. The frac-

tion b.pt. 200° (0.9mm Hg) contained crude 2-[p-(1-cyclohexenyl)-phenyl/oxymethyl]-pyridine, m.pt. 58-60°. (61751V)

61761V/35

N V PHILIPS

B06 E31 K08

PHYS 20.02.73

DT 2405-765

20.02.73-NL-002304 (22.08.74) B01d-59/24 C01g-57

Liquids contg. 99m technetium - isotopes generator using alumina and hydrated manganese dioxide with 99m molybdenum as sodium molybdate

In a process for producing liquids contg. 99mTc, using a vessel contg. an alumina carrier for the mother isotope (99mMo) which is present as a molybdate, part of the alumina is coated with hydrated manganese dioxide in amt. of 1.5-4 mg. Mo per gram of alumina, pref. 2.2-3 mg/g.

USE

The solns. contg. 99mTc are useful as tracers in medical diagnosis and for marking protein and sulphur colloids.

ADVANTAGES

The product solns. are of good purity, contg. no Al³⁺ ions and have pH 6.5-7.5.

DETAILS

The vessel (1) has an entry port (2) at the top and an outlet (3) at the bottom; it is flanged on both ends (4). There is a taper at (5) housing a trapezoidal glass filter (6). The inlet and outlet (2,3) are closed with flanged rubber plugs (7) secured by aluminium covers (10) containing a hole (11). The upper layer of carrier material (12) consists of alumina

B5-A4, B12-K4.

2 21

articles which are partially or fully coated with hydrated or partly hydrated manganese dioxide. The lower layer (13) is alumina. The total amt. of carrier material is e.g. 7g. of which 3g. is in the upper layer. The carrier material is located between the glass filter (6) and a micropore filter (14) held against the material by a sealing ring (15). In the upper layer (12) is the mother isotope 99mMo as an alkali metal molybdate, e.g. sodium molybdate. A wash liq. e.g. physiological saline is fed into the top of the vessel through a hollow injection needle and the mother isotope 99mMo is absorbed as sodium molybdate. Through radioactive decay 99mTc is present in the form of sodium pertechnetate which is taken up by the soln. and then, after passing through the lower layer (13) and the filter (6), can be drawn off with an injection needle. (61761V).

